 




## Instruction Manual

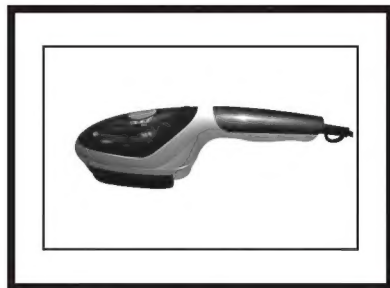

Powerful Steam Brush  
Model:ST-80  
120V,AC,60Hz,800W  
Date code:07/03  
Household use only  
Made In China



 
LISTED  
E234695  
53FG

**ST-80**

Distributed By:Smartek USA Inc.Brooklyn,NY 11206

Before operating this unit,please read these instructions completely

# POWERFUL STEAM BRUSH

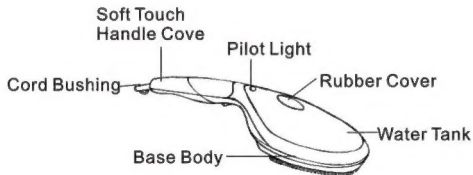

## This Steam-X device includes the following:

Soft Touch Handle Cove	Rubber Cover	Brush A
Cord Bushing	Water Tank	
Pilot Light	Water cup	
Base Body	Brush B	

**WARNING**  
Never use with any volatile cleaning agent, spray or stain removing agents to avoid blight to clothes and risk of fire.

# ATTACHMENTS

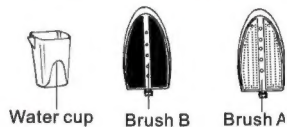 


Fig.1

Water cup:

Brush B:

Brush A:

# IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using and save this manual for reference.

1. Please keep this instruction manual and read it thoroughly before using the appliance, and check and ensure that the voltage of the power socket is same as the rating marked on the steamer.
2. Use the steamer for its intended use stated in the instruction manual.
3. To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
4. Never yank the power cord to disconnect, instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surface to avoid the insulation damaged. Let steamer cool completely before storing.
6. Always disconnect steamer from electrical socket first when filling with water and emptying.
7. Always disconnect steamer from electrical socket when not in use.

8. Do not operate steamer with a damaged cord or if the steamer has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the steamer, take it to qualified serviceman for examination and repair. Incorrect reassembly can caused a risk of electric shock when the steamer is used.
9. Never let children near the appliance in use or after use. Although the power plug has been disconnected, the remaining temperature always can produce steam. After use, put the steamer in a place where children cannot touch. Empty the remaining water from the water tank and store it until it cools completely (about half hour after the steamer is unplugged).
10. Do not touch steaming surface or turn steaming side forward person and yourself to avoid unexpected pressing on the steam bottom. It may cause serious burns from hot steam or water.
11. Do not use the steamer with steaming upside down.
12. Do not wear the clothes during steam cleaning, steam could go through the fabric causing burns.
13. Close supervision is necessary for any appliance being used by or near children. Do not leave appliance unattended while connected.
14. Burns could occur from touching hot water, or steam. Use care when you turn a steam appliance upside down, there may be hot water in the reservoir.

## HOW TO USE YOUR STEAM-X DEVICE

 
### 1. Before use:

**CAUTION:** Before removing or attaching parts, unplug the steamer from the electrical outlet and let it cool.

Unpack the appliance, please read the instructions carefully before use, and keep in a safe place for future reference. When reading, please refer to the figures which are mentioned in the text.

### 2. Insert and remove the brush:

- Select the brush A or brush B, put the brush hook into the front of the base body's slot first. And then press down at the rear part of the brush, it would be locked in place. (fig.2)
- Slide the brush lock backwards and then take the brush upwards and remove. (fig.3)

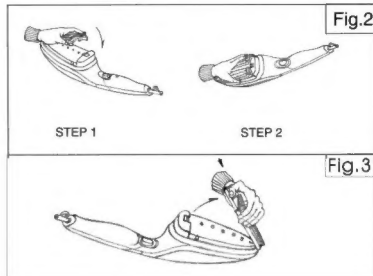

### 3. Filling the water tank

- a) Remove the plug from the socket.
- b) Open the rubber cover, fill the water tank by a water cup with 100ml. maximum capacity. (fig.4)
  - If the water is very hard, it is advised to use distilled water or demineralized water only.
  - Do not use chemically descaled water.
- c) Replace the rubber cover.
- d) Pour out the remaining water after use.

**Note:** When the steamer is plugged in, slight steam may come out from the steam holes even the steam button is not pressed. This is normal to the unit.

Fig.4




4. How to use:

When the appliance is plugged in to the AC voltage of 120V, the pilot light is on. For the very first time use, the working temperature will be reached when the pilot light is turned off. A jet of steam can be produced by pressing the steam button at regular intervals. For better performance on the burst of steam, you should not continuously press the steam button more than 5 times. It is normal for the pilot light to turn on and off while using. **Please note:** The appliance can be used for all directions.


**CAUTION:** Pressing the steam button too frequent, will cause dripping and leakage in water.

 Fig.5A

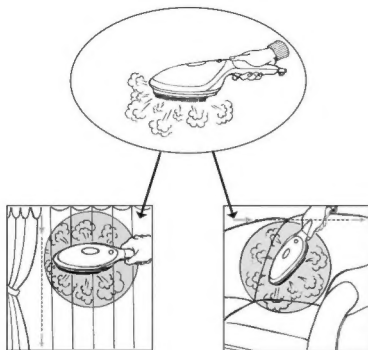

5. The appliance can be used in virtually all articles of clothing and fabrics in home. If you have any doubts, we recommend that you test the appliance on the inside fabric of the garment. With delicate materials, such as silk or velvet, remove the clothes brush and steam the material from a distance.

 Fig.5B

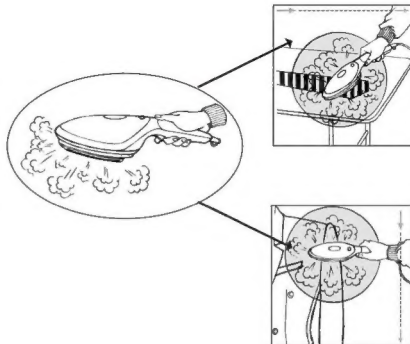

6. Care of curtains and upholstery: (fig.5A)

Creases can be removed from curtains while they are hanging on the rail; simply follow the procedure described in "care of clothes". The appearance of upholstery can also be improved by steaming with the appliance. If the appliance is being used in a horizontal position, best results are achieved by holding it upright occasionally.

7. Now move the appliance down over the fabric. When doing so, press the steam button several times and at the same time smooth the material with the clothes brush. After treatment, let the article of clothing cool down on the hanger.

8. Care of clothes: (fig.5B)

Hang the creased articles of clothing on a clothes hanger. Pull the clothing tight with one hand, place the appliance over the creased area. Gently press the appliance against the clothing, and then press/release the steam button. In this way steam will penetrate right into the fabric, and not just pass over the surface.

9. After use:


Remove the plug from the electrical socket and allow the appliance to cool down. If you do not intend to use the appliance again soon, it is advisable to drain the water out of the tank for storage.

10. Care and cleaning:

The body of appliance (when cooling down) should occasionally be wiped over with a moist cloth, and clean the brush B (clothes brush) with litter brush.

Hang the appliance and the brushes on the hang device. (fig.6)

## ST-80 Can be used in multi-directions

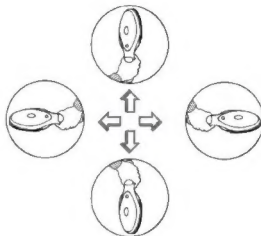 

### Standards

Material for the unit	Body:ABS , Brush:pc
Product size	273x73x85mm
Weight	612g
voltage	AC 120V/60Hz



# 1 YEAR LIMITED WARRANTY

Steam-X warrants this product free from defects in material and workmanship for 1 year from provable date of purchase.

Within this warranty period ,Steam-X will repair or replace , at its option, defective parts at no charge ,provided the product is returned ,freight prepaid with proof of purchase to Steam-X .  
Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse,abuse or neglect on part of the owner.  
Warranty is also invalid in any case that the product is taken apart of serviced by an unauthorized service station.



Distributed By: Smartek USA Inc. Brooklyn, NY 11206